
Rue des Rubaniers 21 Zoning industriel II, 7780 Comines T +32 (0)56 554 853

E info@cobefa.be www.cobefa.be

Delivery and installation instructions

- · The client will provide good accessibility to the site for
- · heavy transport 44 tonnes.
- If the truck is unloaded by the client, we will provide 1 hour of unloading time. After the first hour, waiting hours will be charged at EUR 65/hour excluding VAT.
- If the elements are unloaded by our own crane truck, 1 hour of placement is provided. Any additional crane hours will be billed at 85 EUR/hour excluding VAT.
- In case of placement by crane truck, the customer provides the assistance of 1 to 2 persons
- · The crane truck must be able to position itself just next to the foundations with sufficient space for the outriggers.
- · The customer (contractor) is responsible for providing good load-bearing subsoil/foundations.
- · Cobefa is not responsible for damage as a result of nonload-bearing foundations.
- · When deviating from these load classes, a customised calculation note can always be requested.
- · Cobefa only guarantees the use of the elements according to these load classes or when using the calculation notes provided by us
- · The guarantee only covers the replacement of the elements never installation of the elements or any consequential damage.

Load classes AGRI U retaining wall

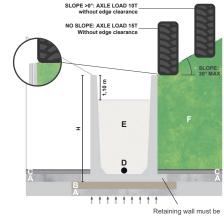

Loadclass C Silo

blocked to avoid slide

- A Possibly rubble or concrete
- B Stabilized sand
- C Concrete or asphalt
- D Drainage

Legend

- E backfilling with draining crushed stone
- F Corn/grass (1000 kg/m³, Φ=30°)*
- U element must be filled before loading

Always check that the bearing capacity of the soil is

*Storage calculations are carried out for materials with a density of no more than 1000kg/m3 and a maximum angle of maximum 30°. The maximum load authorised above the silage is 15 tonnes/axle The dry content of the material to be stored is at least 33%